

2. DIP SWITCHES

DIP SW1

N.B. Please turn off the power switch before changing the DIP SW setting, or the change may not take effect.

DIP SW2

		SW 2							
		1	2	3	4	5	6	7	8
FLIP PICTURE	NO	OFF							
	YES	ON							
E D C N H O C	MODE 1	1 COIN 1 PLAY			OFF	OFF	OFF	OFF	OFF
		2 COINS 1 PLAY			OFF	ON	OFF	OFF	OFF
		3 COINS 1 PLAY			OFF	OFF	ON	OFF	OFF
		4 COINS 1 PLAY			OFF	ON	ON	OFF	OFF
		5 COINS 1 PLAY			OFF	ON	ON	OFF	OFF
		6 COINS 1 PLAY			OFF	ON	OFF	ON	OFF
		1 COIN 2 PLAYS			OFF	OFF	ON	ON	OFF
		1 COIN 3 PLAYS			OFF	ON	ON	ON	OFF
		1 COIN 4 PLAYS			OFF	OFF	OFF	OFF	ON
		1 COIN 5 PLAYS			OFF	ON	OFF	OFF	ON
		1 COIN 6 PLAYS			OFF	OFF	ON	OFF	ON
		2 COINS 3 PLAYS			OFF	ON	ON	OFF	ON
		3 COINS 2 PLAYS			OFF	OFF	OFF	ON	ON
		4 COINS 3 PLAYS			OFF	ON	OFF	ON	ON
		1COIN CONTINUE			OFF	OFF	ON	ON	ON
		FREE PLAY			OFF	ON	ON	ON	ON
2	MODE 2	* A	1 COIN 1 PLAY		ON	OFF	OFF		
			2 COINS 1 PLAY		ON	ON	OFF		
			3 COINS 1 PLAY		ON	OFF	ON		
			5 COINS 1 PLAY		ON	ON	ON		
		** B	1 COIN 2 PLAYS		ON			OFF	OFF
			1 COINS 3 PLAYS		ON			ON	OFF
			1 COINS 5 PLAYS		ON			OFF	ON
			1 COINS 6 PLAYS		ON			ON	ON

* COIN CHUTE A

** COIN CHUTE B

- 1 Coin Continue is the mode which starts the game with 2 coins, but continues it with 1 coin alone. When this mode is set, no other coin modes can be set.
- DIP SW 3 is not in use.