 


COIN/CREDIT OPTION SWITCH SETTING DIP SW 1

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN 4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
2 COINS 2 CREDITS	ON	ON	ON	ON	ON	ON	ON	OFF
3 COINS 1 CREDIT	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
3 COINS 2 CREDITS	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
4 COINS 1 CREDIT	ON	OFF	OFF	ON	ON	OFF	OFF	ON
4 COINS 2 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS 1 CREDIT								
2 COINS 2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
3 COINS 1 CREDIT								
3 COINS 2 CREDITS								
3 COINS 3 CREDITS								
4 COINS 1 CREDIT	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS 2 CREDITS								
5 COINS 1 CREDIT								
1 COIN 1 CREDIT								
2 COINS 2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS 3 CREDITS								
4 COINS 5 CREDITS								
1 COIN 1 CREDIT								
2 COINS 3 CREDITS	OFF	ON	ON	ON	OFF	ON	ON	ON
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON
	COIN SW #1			COIN SW #2				

BARE BD NO.

171-5553-~

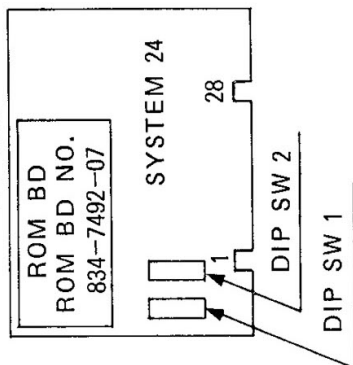

MONITOR

(E)

HORIZONTAL

※ COIN CHUTE

COMMON: コインの受け付けが共通になっている筐体タイプが多いです。

(Used for the cabinet of the COMMON chute type in which the acceptance of coins is done in common.

INDIVIDUAL: コインジュエートが各ブレイヤーズごとにあり、それぞれにコインを受け付ける事ができる簡体タイプ用です。この時のコイン設定には DIP SW 1 の 1 番～4 番のみ使用し、5 番～8 番は全て OFF にして使用して下さい。

Used for the cabinet of the INDIVIDUAL COIN CHUTE type which allows each chute to accept coins. For setting COIN/CREDIT combination, use only No.1-No.4 of DIP SW 1 and turn No.5 ~No.8 OFF.

OPTION SWITCH SETTING


[illegible]

PIN ASSIGNMENT

COMPONENT SIDE		SOLDER SIDE	
GND	1	A	GND
GND	2	B	GND
+5V	3	C	+5V
+5V	4	D	+5V
+12V	5	E	+12V
COIN METER 1	6	F	COIN METER 1
(NOT USED)	7	H	(NOT USED)
(NOT USED)	8	J	(NOT USED)
1P SHOT	9	K	2P SHOT
1P JUMP	10	L	2P JUMP
(NOT USED)	11	M	(NOT USED)
1P FORWARD (DOWN)	12	N	2P FORWARD (DOWN)
1P BACKWARD (UP)	13	P	2P BACKWARD (DOWN)
1P RIGHT	14	R	2P RIGHT
1P LEFT	15	S	2P LEFT
(NOT USED)	16	T	(NOT USED)
(NOT USED)	17	U	(NOT USED)
(NOT USED)	18	V	(NOT USED)
(NOT USED)	19	W	(NOT USED)
COIN 1	20	X	1P START
COIN 2	21	Y	2P START
TEST	22	Z	(NOT USED)
SERVICE	23	a	(NOT USED)
SPEAKER (+)	24	b	SPEAKER (-)
RED	25	c	GREEN
BLUE	26	d	CMP. SYNC
GND	27	e	GND
GND	28	f	GND

56P P=3.96mm

 
JOYSTICK CONTROL DIRECTIONS

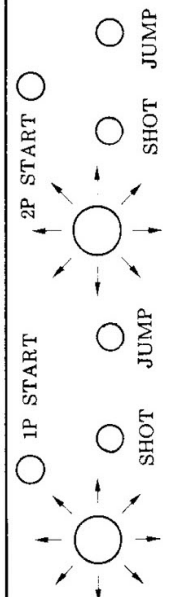


1P SIDE

2P SIDE

 ボナンザブラザーズ BONANZA BROS.

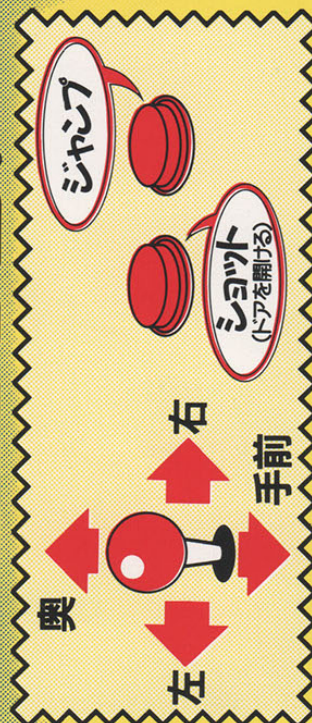

制限時間内に建物の中の「宝」をとって、

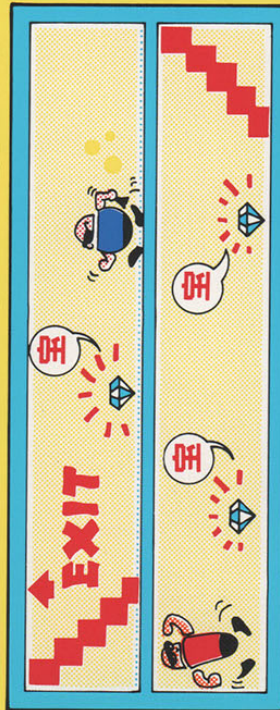 

EXITから脱出だ!!



© SEGA 19

 
SEGA

※必ずオリジナル証またはライセンス証を貼付してください

422-0340-01

柱や ドア や 階段 に
隠れるコトができる

A 柱の影 B ドア C 階段の途中

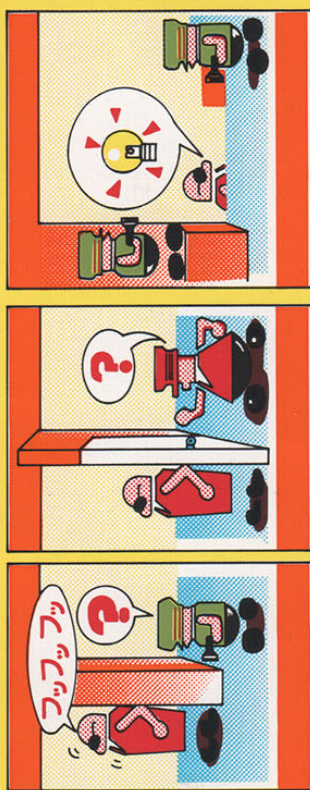

そして、スキを見計らって……



● ドアをぶつける ● ジャンプして攻撃

攻撃だあッ!!

SEGA

© SEGA 1990

422-0341-01